

## Printer Driver Settings

### CANON

For older CANON BJC- and S-Printer please use Media type "Glossy Photo Paper", Print quality "manuel", Setup "fine" (1), Exceptions: For BJC 8200, S800 (S450, S600 with photo printhead) please use Media type "Professional Glossy Photo Paper", Print quality "manuel", Setup "fine" (1)

For newer CANON i-Printer please use Media type "Film", Print quality "manuel", Setup "fine" (1) Exceptions: For i 350, i450 please use Media type "Professional Glossy Photo Paper", Print quality "manuel", Setup "fine" (1)

For newer CANON PIXMA i-Printer please use Media type "Professional Glossy Photo Paper", Print quality "manuel", Setup "fine" (1)

### EPSON

For older EPSON Stylus Color-Printer please use Media Type: "Photo Quality Glossy Film"; Mode: "Custom" > "Advanced.." > Print Quality: "1440 dpi" or "2880 dpi"; "High Speed" = off (if applicable); Color Management > Mode: "Photo-realistic", Exceptions: For Stylus Color 600, 800 please use Media Type: "Photo Glossy Paper"; Mode: "Custom" > "Advanced..": Print Quality: "1440 dpi"; Color Management > Mode: "Photo-realistic". C86 is not suitable with the material !

For older EPSON Stylus Photo-Printer please use Media Type: "Photo Quality Glossy Film"; Mode: "Custom" > "Advanced.." > Print Quality: "1440 dpi" or "2880 dpi"; "High Speed" = off (if applicable); Color Management > Mode: "Photo-realistic". Exceptions: For Stylus Photo 810, 950 please use Media Type: "ColorLife Photo Paper"; Mode: "Custom" > "Advanced.." > Print Quality: "1440 dpi" or "2880 dpi"; "High Speed" = off (if applicable); Color Management > Mode: "Photo-realistic".

For newer EPSON Stylus-Photo R-Printer please use Media Type "Premium Glossy Photo Paper", Mode "Photo Enhanced" and "Best Photo".

For Epson Stylus Pro 2400 please use Media Type "Premium Glossy Photo Paper", Mode "Photo Enhanced" and "Best Photo". Epson Stylus Pro 2100 is not suitable with the material !

### HEWLETT PACKARD

For older HP Deskjet-Printer please use Paper Type: "HP Premium Photo Paper, glossy" > Quality Setup: "Optimal" or "Best" and Photo Paper Printing "PhotoREt" or "2400x1200dpi" if applicable. Exceptions: For DeskJet 3820, 5550 please use "HP Premium Plus Photo Paper, glossy" > Print Quality: "Best" > Photo Paper Printing: "4800x1200 dpi" or "PhotoREt"

For HP Business Inkjet 1100 please use Paper Type "HP Premium Plus Photo Paper, glossy", Print Quality "Best"

For older HP Photosmart-Printer please use Paper Type "HP Premium Plus Photo Paper, glossy" > Print Quality: "Best" > Photo Paper Printing: "PhotoRet" or "2400x1200 dpi".

For newer HP Photosmart-Printer please use Paper Type "HP Premium Plus Photo Paper, glossy" or "HP Premium Plus Inkjet Transparency" > Print Quality: "Best" > Photo Paper Printing: "PhotoRet" or "2400x1200 dpi", Color Management "Color Smart/ sRGB"

## **LEXMARK**

Under Paper Settings/ Media Type please select "Glossy/ Photo Paper" or "Gloss Photo" and set Print Quality to "High", "Maximum" or "Best"